

On the sensor you seen an S on the left bottom side and a minus on the right bottom side.

S stands for Signal and should be connected to the A0 port.

The minus stands for Ground and should be connected to the GND port.

